




5007R TURN SIGNAL SWITCH WIRING DIAGRAM

FOR INTERNAL INDICATOR LAMP:
Switch housing must be grounded by
contact with metal steering column

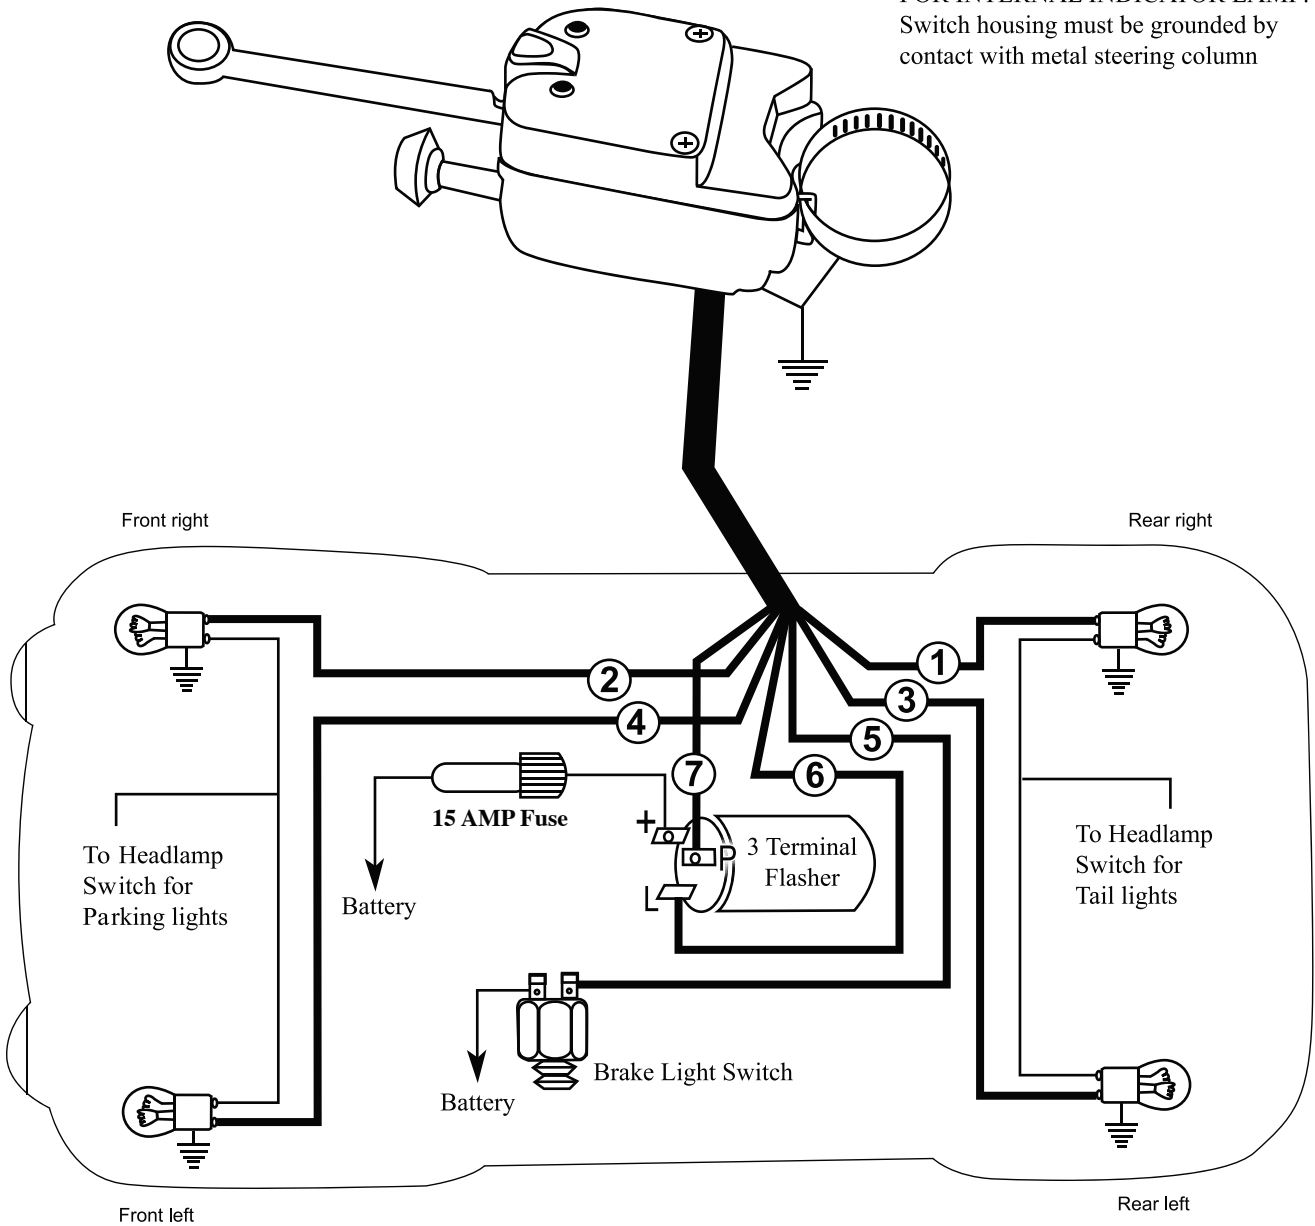

- | | | | | | |
|--------|--------------|--------------------------|-------|--------------|--|
| Brown | — 1 — | Right rear flasher lamp | Red | — 5 — | Stop switch |
| Green | — 2 — | Right front flasher lamp | Black | — 6 — | Flasher L terminal |
| Orange | — 3 — | Left rear flasher lamp | Blue | — 7 — | Flasher P terminal
(For indicator lamp inside switch) |
| Yellow | — 4 — | Left front flasher lamp | | | |
- = Negative ground on car body